
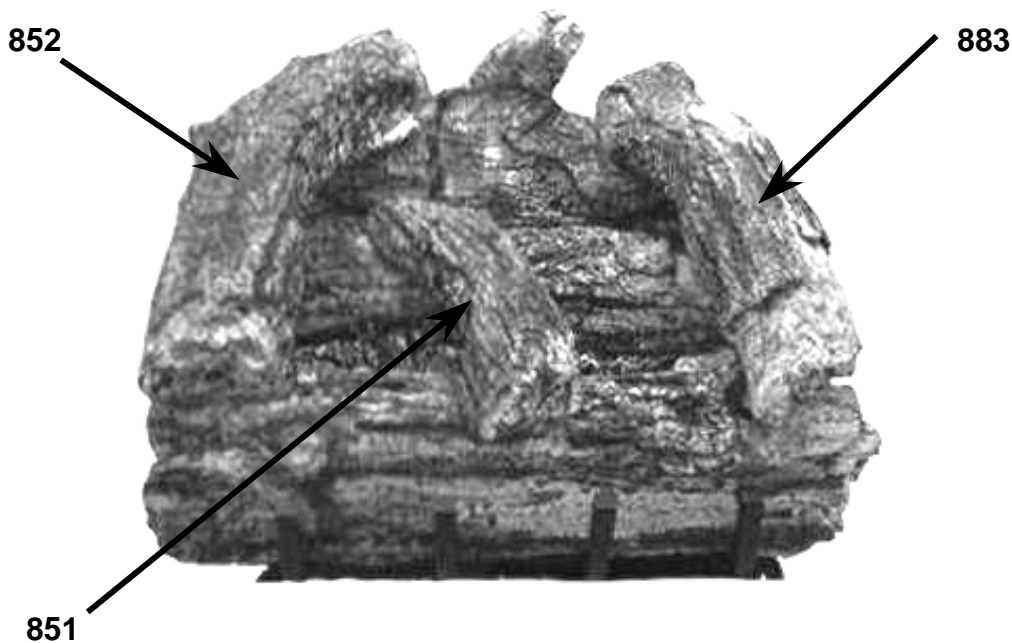


HEATMASTER®
18" Amber Glo Log Placement Instructions
FOR HM2 SERIES BURNER ONLY

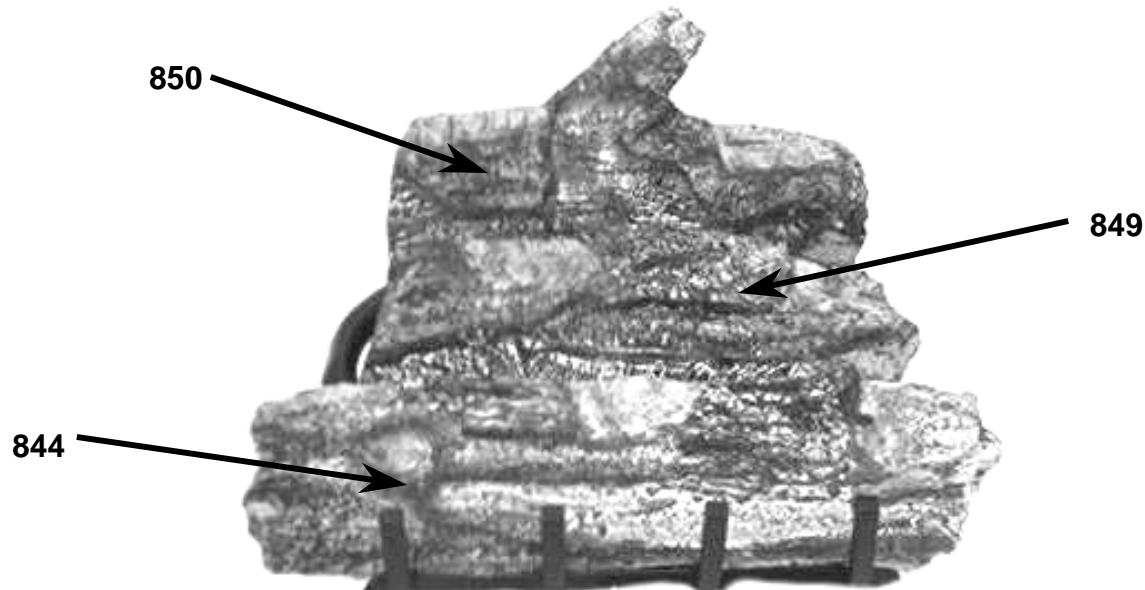

WARNING: It is imperative that the flame does not come into contact with the logs. Some adjustment with the logs in the notches may be required in order to ensure that there is no impingement. It is the installers' responsibility to ensure proper log placement and adjustment.

WARNING: Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance will result in property damage or personal injury.

18" Amber Glo Log Part Numbers



844



849



850



852





883



851

HEATMASTER®
24" Amber Glo Log Placement Instructions
FOR HM2 SERIES BURNER ONLY

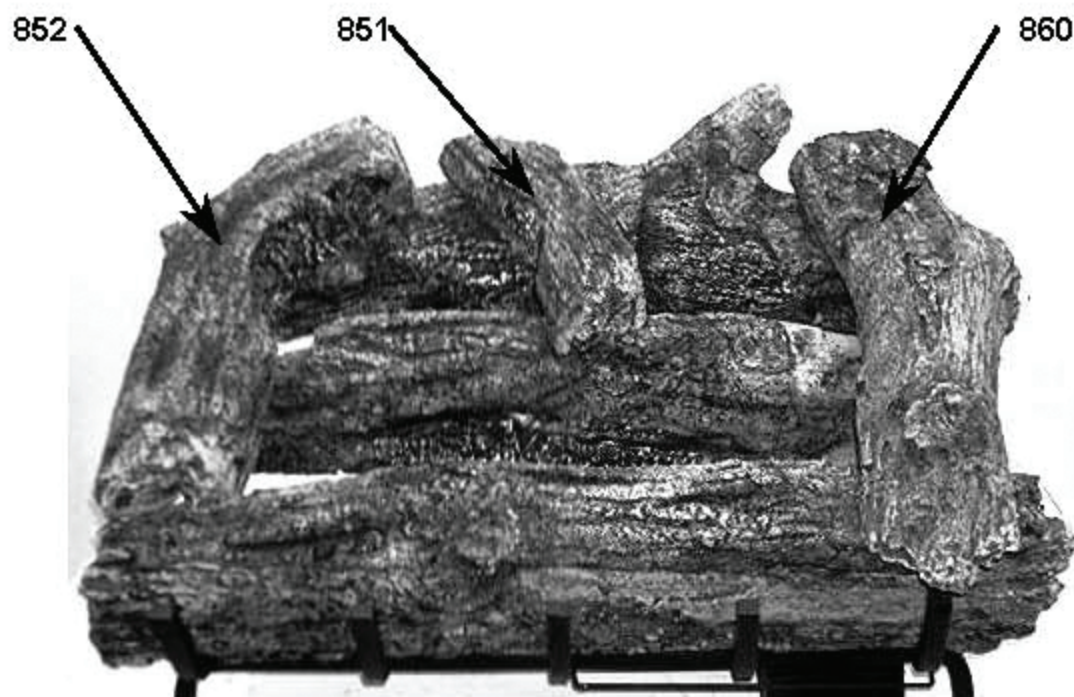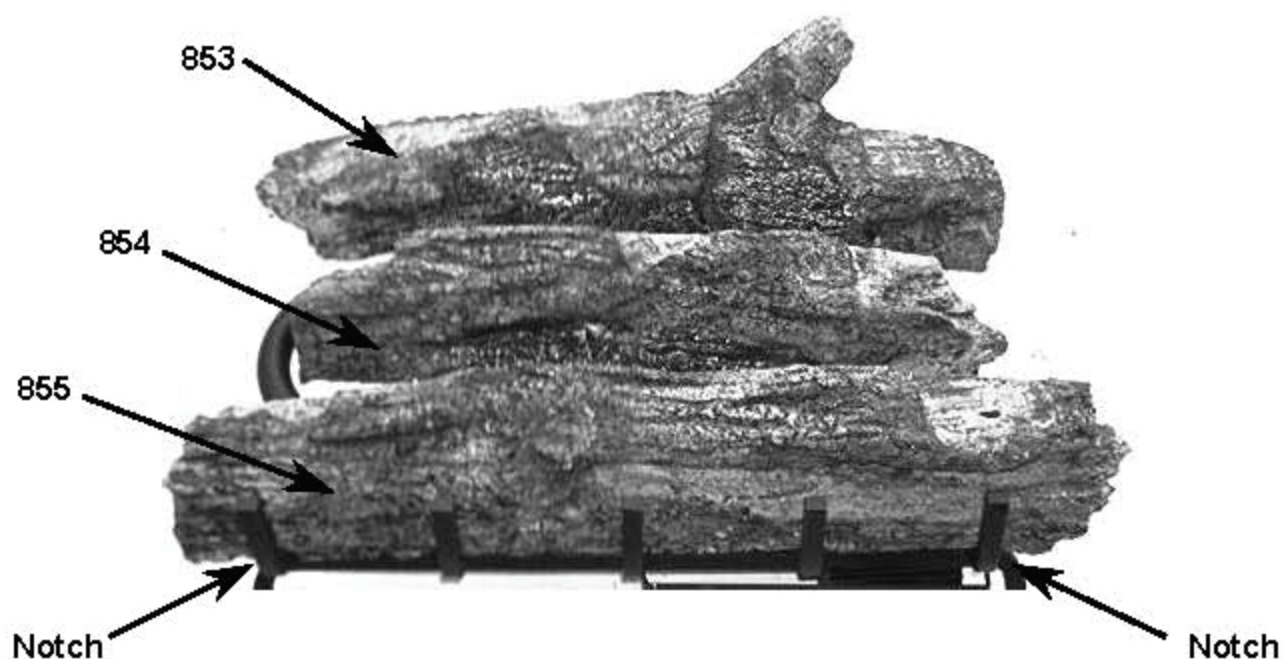

WARNING: It is imperative that the flame does not come into contact with the logs. Some adjustment with the logs in the notches may be required in order to ensure that there is no impingement. It is the installers' responsibility to ensure proper log placement and adjustment.

WARNING: Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance will result in property damage or personal injury.

24" Amber Glo Log Part Numbers



855



854



853



852




860



851

HEATMASTER®
30" Amber Glo Log Placement Instructions
FOR HM2 SERIES BURNER ONLY

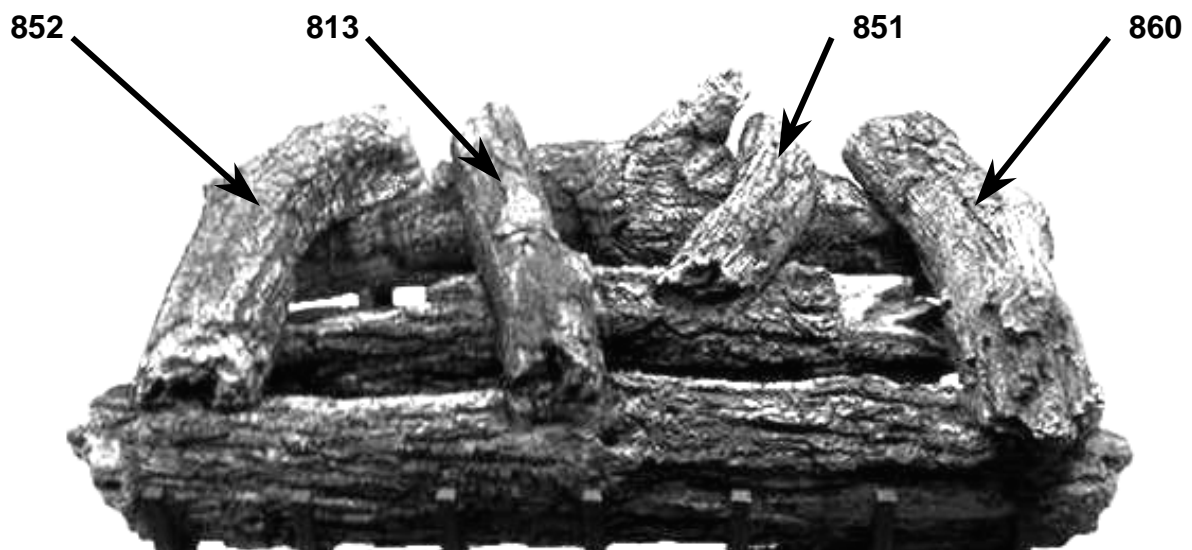


WARNING: It is imperative that the flame does not come into contact with the logs. Some adjustment with the logs in the notches may be required in order to ensure that there is no impingement. It is the installers' responsibility to ensure proper log placement and adjustment.

WARNING: Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance will result in property damage or personal injury.

30" Amber Glo Log Part Numbers



856

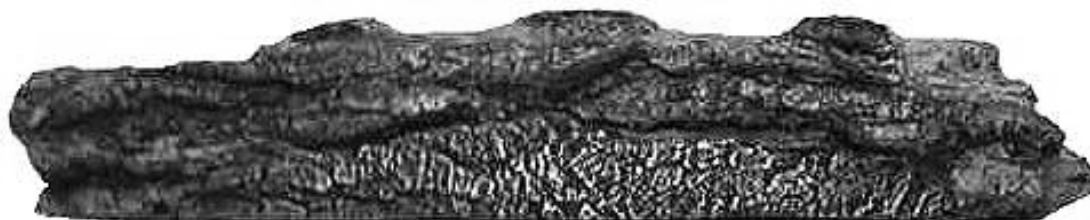

857



858



852



860



813



851