HEATMASTER®

36” & 42” Log Placement

Blue Ridge Blaze

Huntington Beachfire

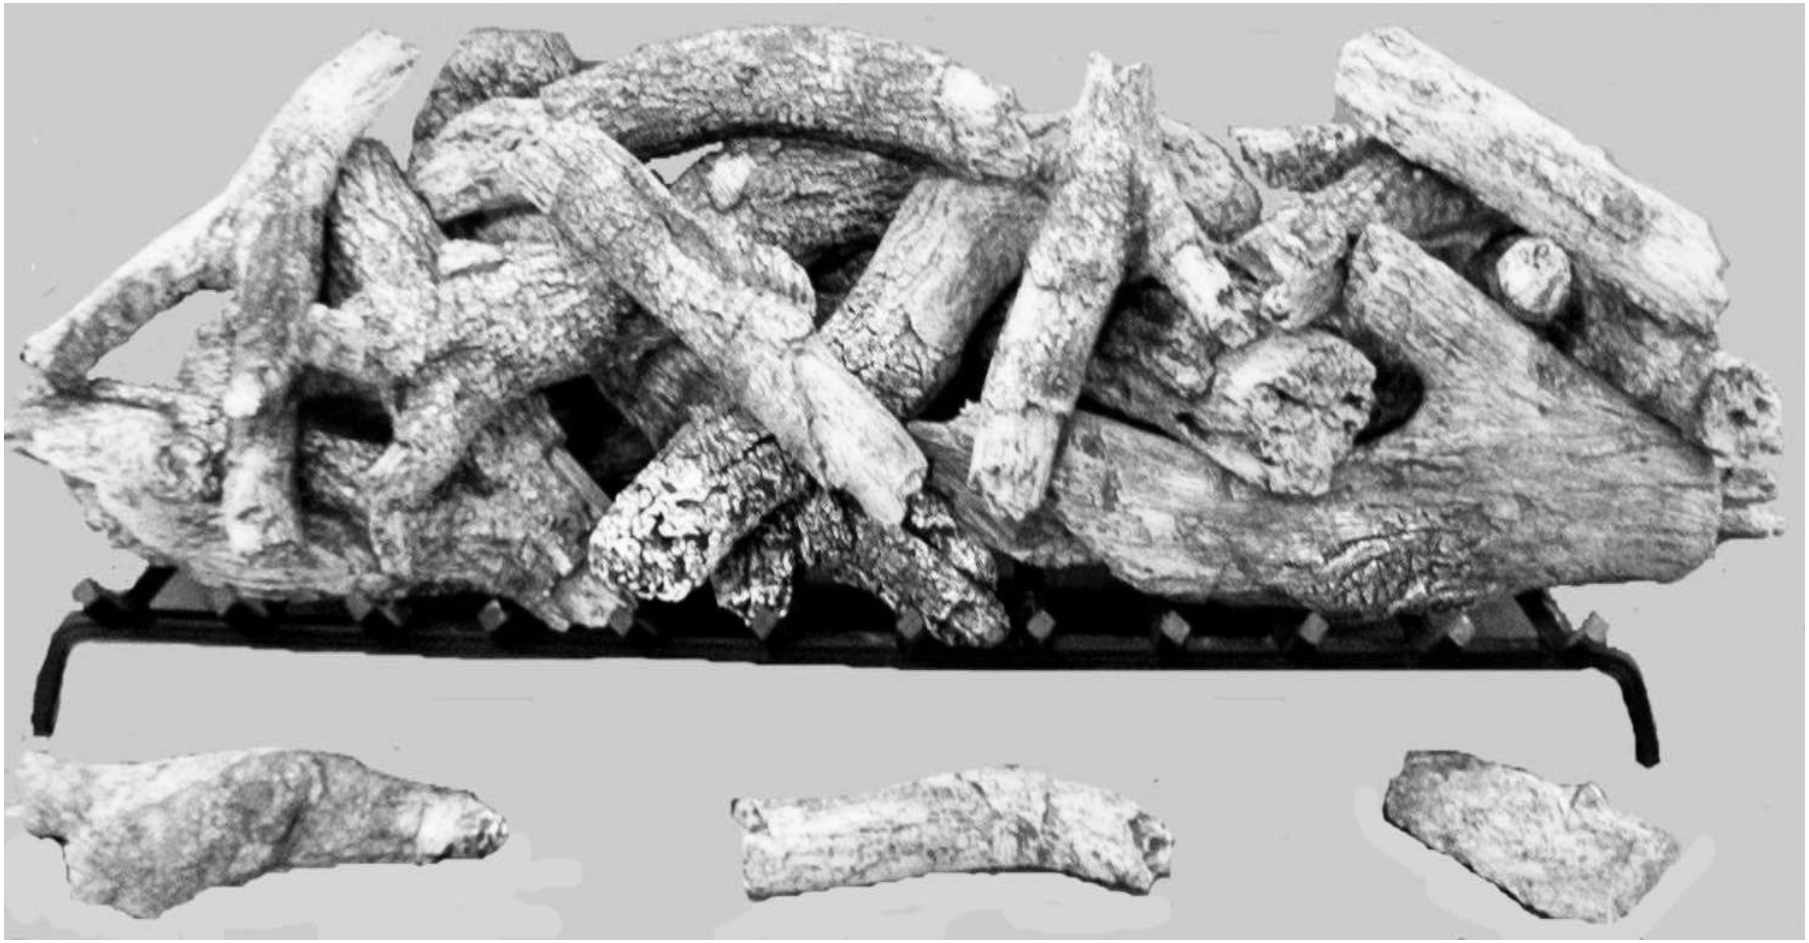

The above illustration is a recommendation only. Log arrangement may be the installer’s choice.

HEATMASTER®
36” & 42” Log Part Numbers

Huntington Beachfire
Blue Ridge Blaze

809

815

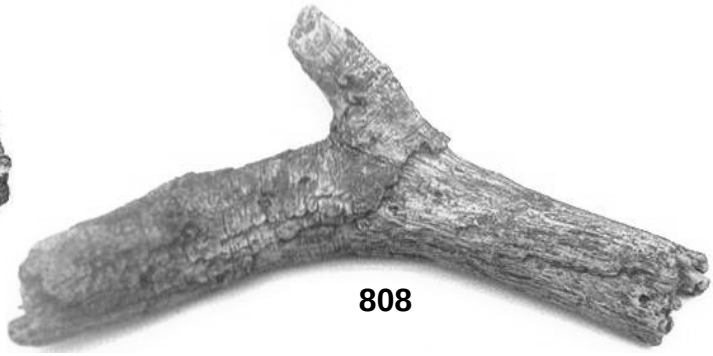

808

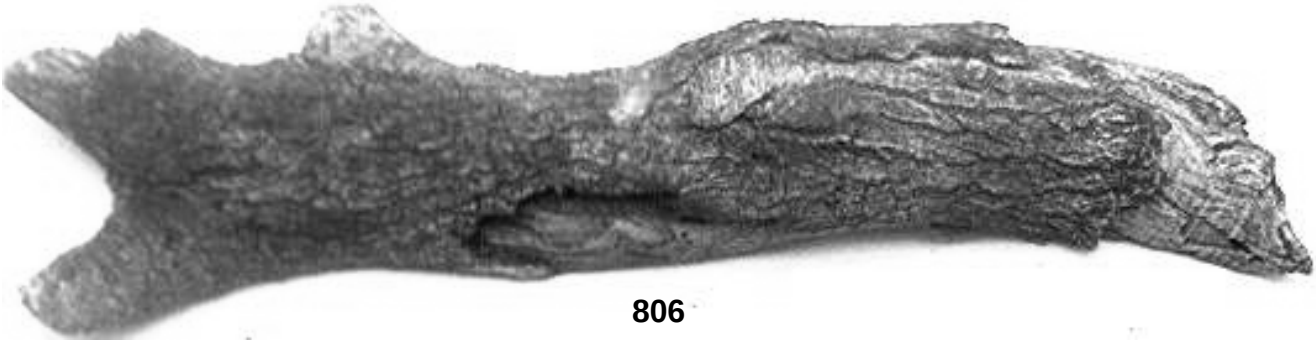

806

804

805

HEATMASTER®
36” & 42” Log Part Numbers

Huntington Beachfire
Blue Ridge Blaze

807

810

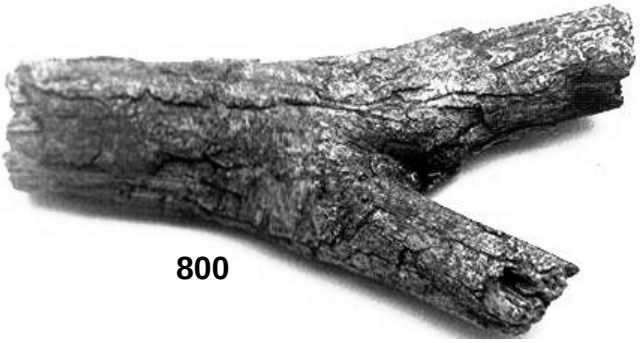

800

811

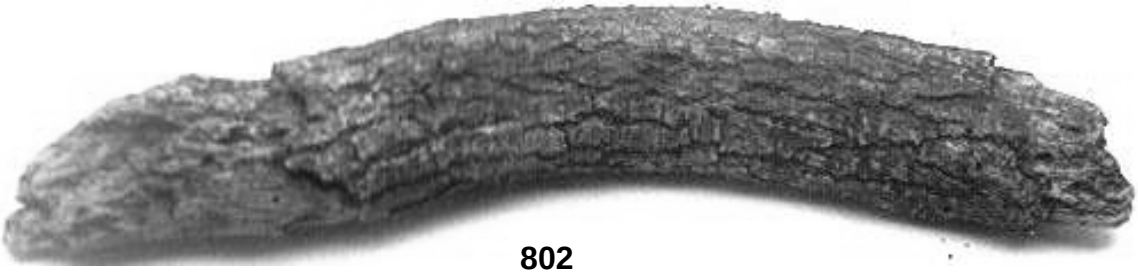

802

803

801

HEATMASTER®
36” & 42” Log Part Numbers

Huntington Beachfire
Blue Ridge Blaze

744

885

886

874

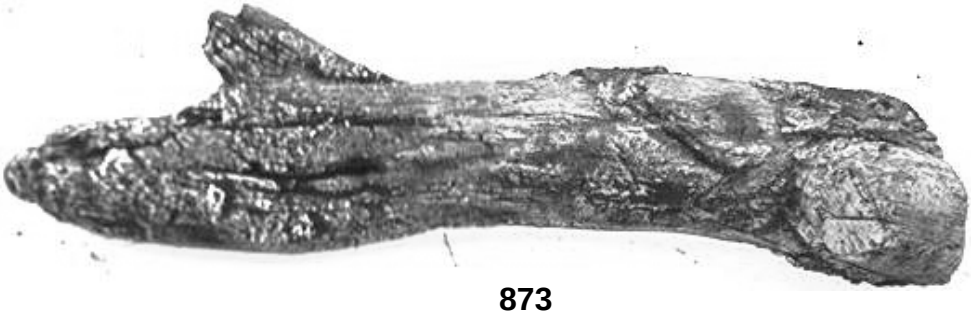

873

887