


COUNTRY CHARRED OAK 30"  
LOG PLACEMENT

STEP 1

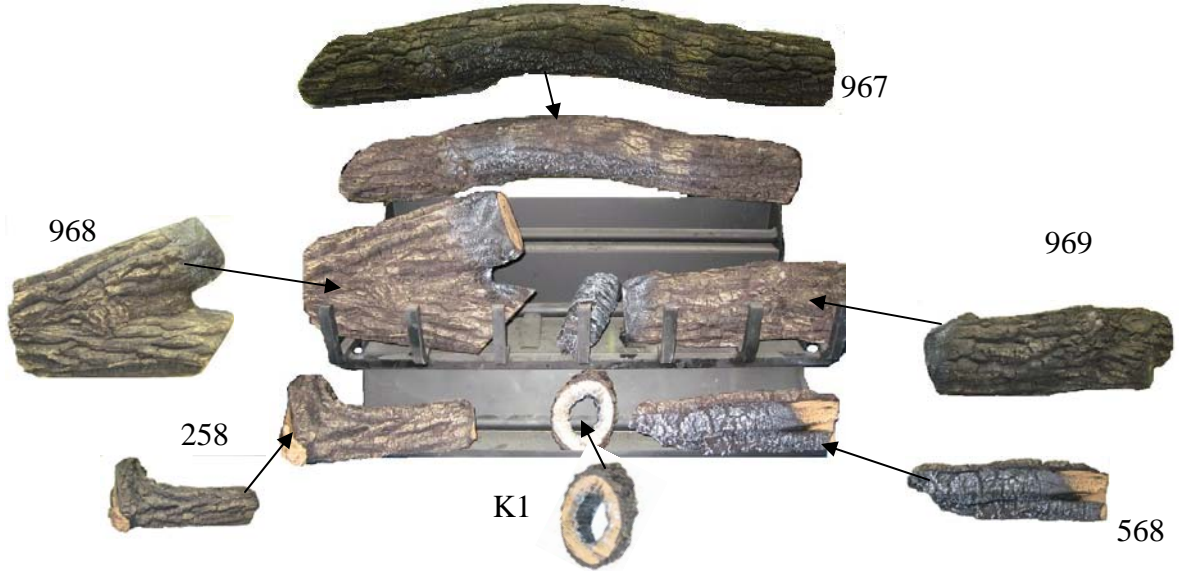

STEP 2



STEP 3



05-1013