

TIMBER 30" LOG PLACEMENT


STEP 1

LOGS: 835 Back, 835 Front, 811, 833
806 & 797



STEP 2


LOGS: 807, 851 & 814

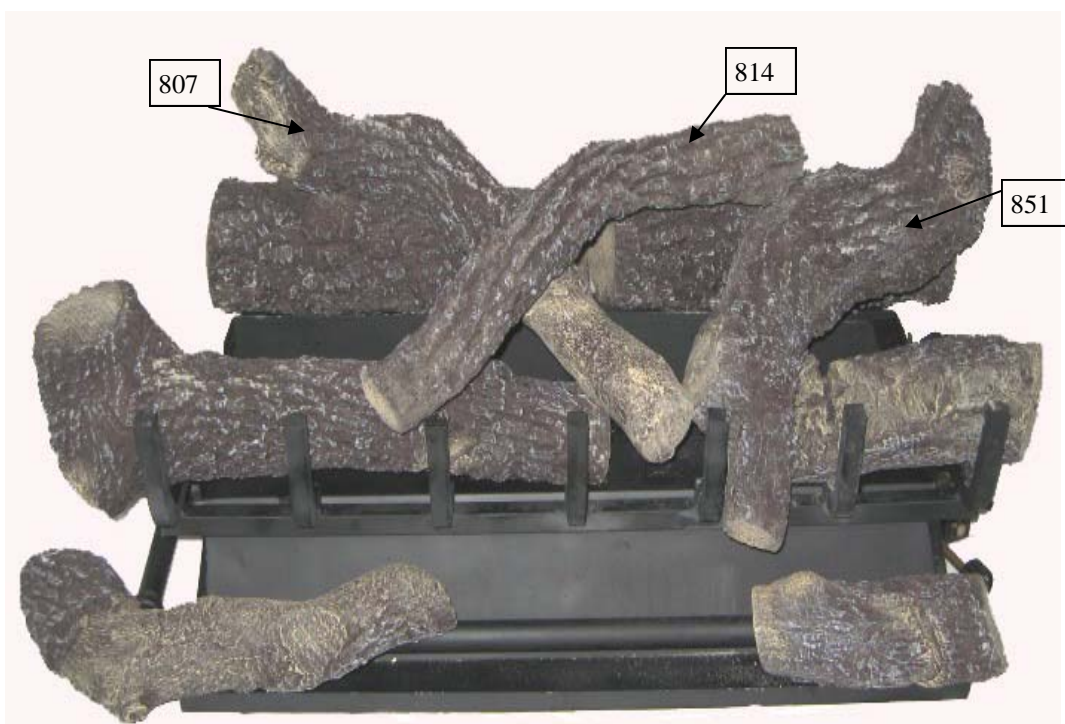

TIMBER 30" LOG PLACEMENT

STEP 3

LOGS: 829, 828, 808

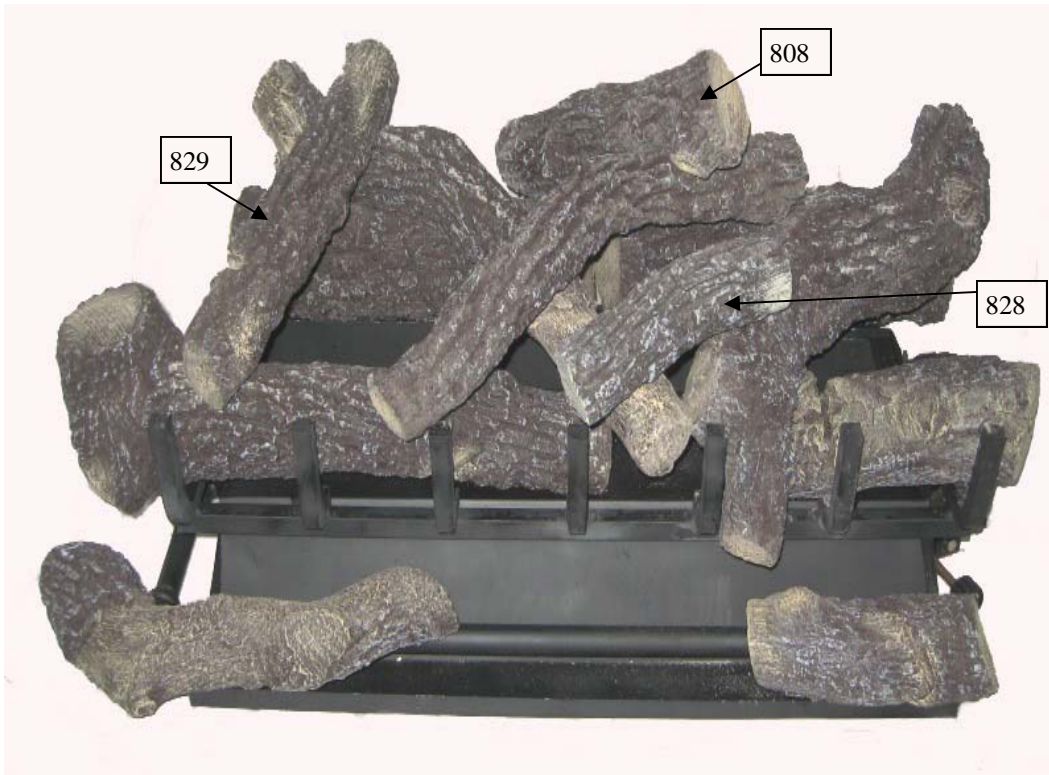

STEP 4

LOGS: 807, 784



Individual log pictures & log numbers.

835 Left



835 Right



811



833



806



797



807 x 2



851



Individual log pictures & log numbers.

