


# Carolina Creek Side 18"

Step 1: Place back log H-1073



Step 2: Place middle log H-1072

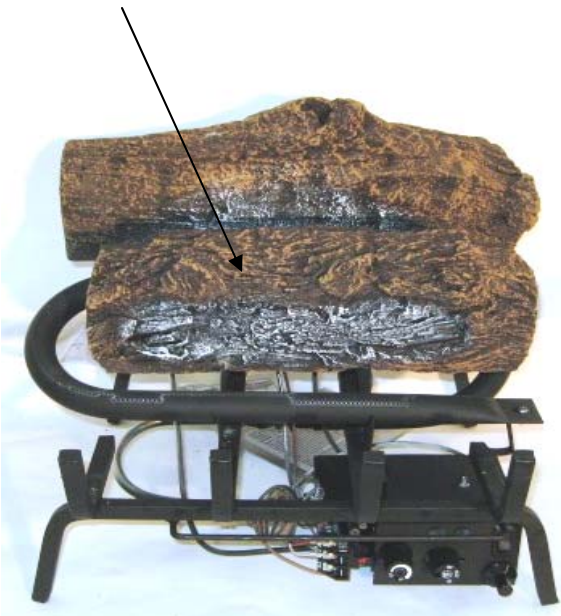

Step 3: Place front log H-1071




**WARNING:** It is imperative that the flame does not come into contact with the logs. Some adjustment with the logs in the notches may be required in order to ensure that there is no impingement. It is the installers' responsibility to ensure proper log placement and adjustment.



**WARNING:** Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance will result in property damage or personal injury.

# Carolina Creek Side 18''

Step 4: Place left log H-1076. Place right log H-1074.

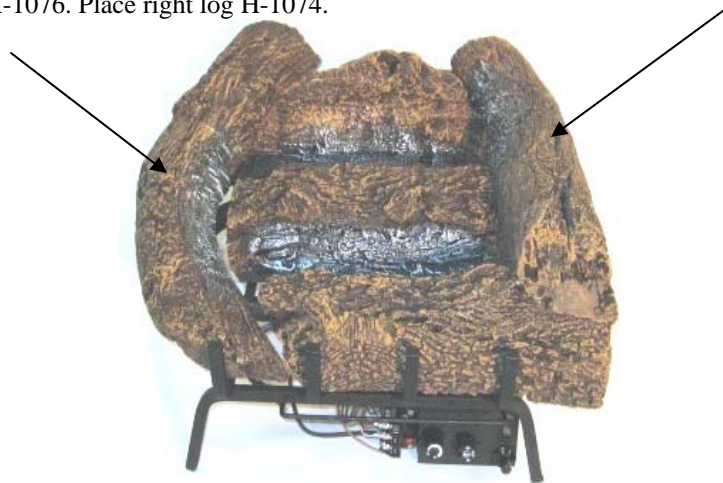

Step 5: Place log H-1075. Place the accent logs H-1077 & H1078

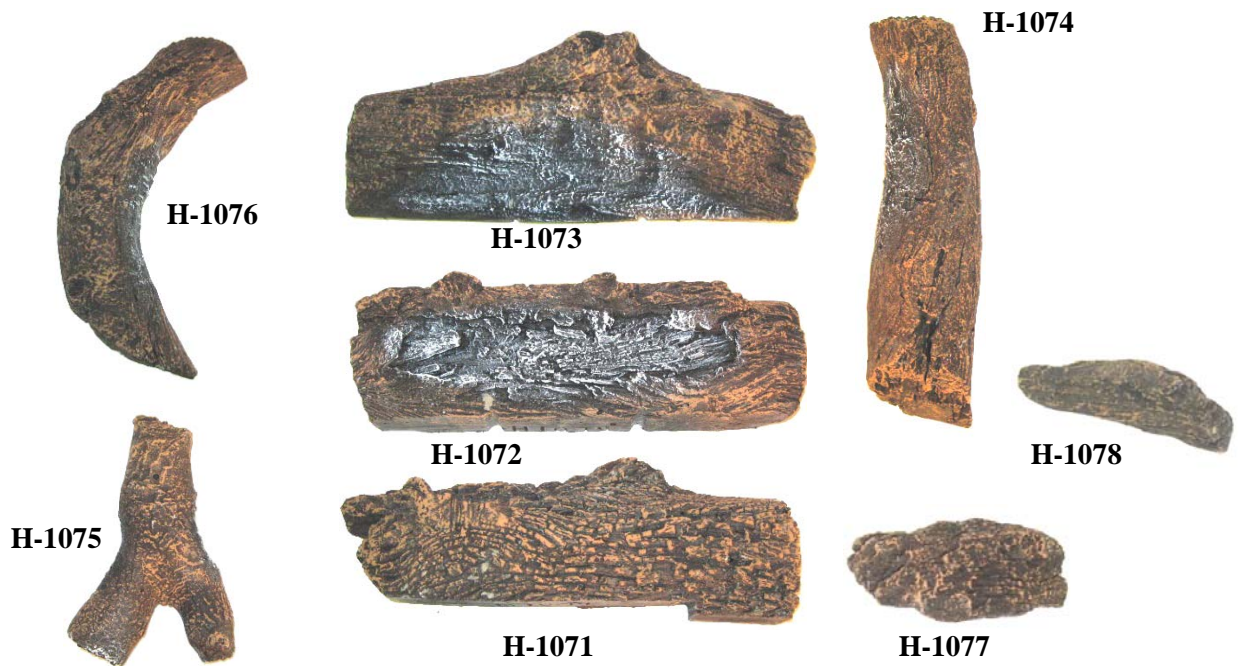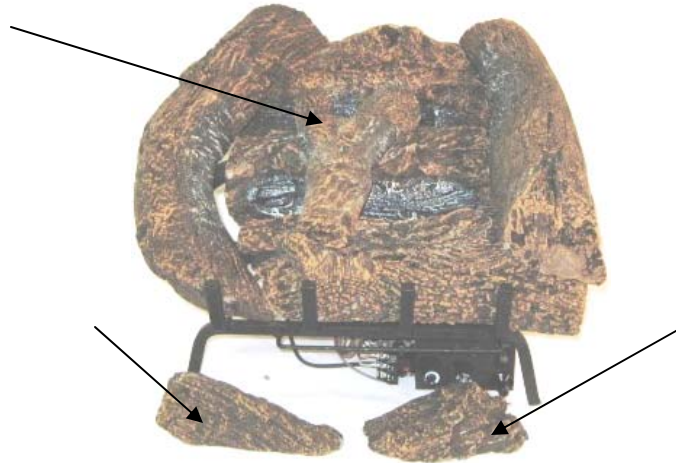



# Carolina Creek Side 24”

Step 1: Place back log H-1067



Step 2: Place middle log H-1066



Step 3: Place front log H-1065



**WARNING:** It is imperative that the flame does not come into contact with the logs. Some adjustment with the logs in the notches may be required in order to ensure that there is no impingement. It is the installers' responsibility to ensure proper log placement and adjustment.

**WARNING:** Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance will result in property damage or personal injury.

# Carolina Creek Side 24"

Step 4: Place left log H-1068 . Place right log H-1069



Step 5: Place log H-1062. Place the accent logs H- 1077 & H-1078 as shown below.



# Carolina Creek Side 24''



H-1067



H-1066



H-1065



H-1068



H-1062



H-1069



H-1078



H-1077




# Carolina Creek Side 30”


Step 1: Place back log H-1060.



Step 2: Place middle log H-1059

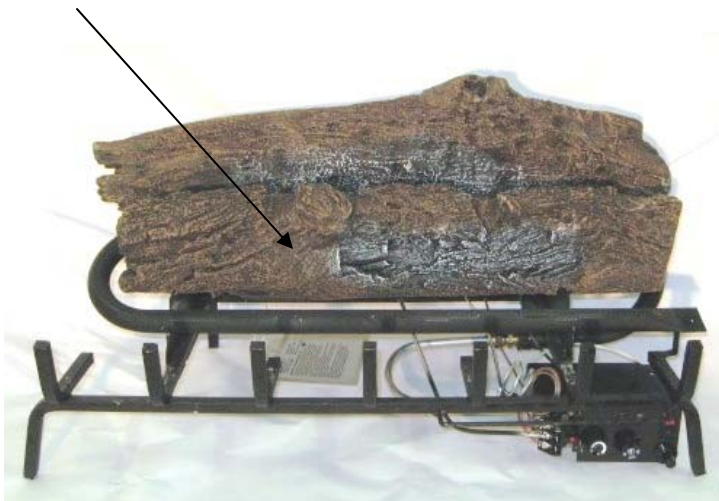

Step 3: Place front log H-1058

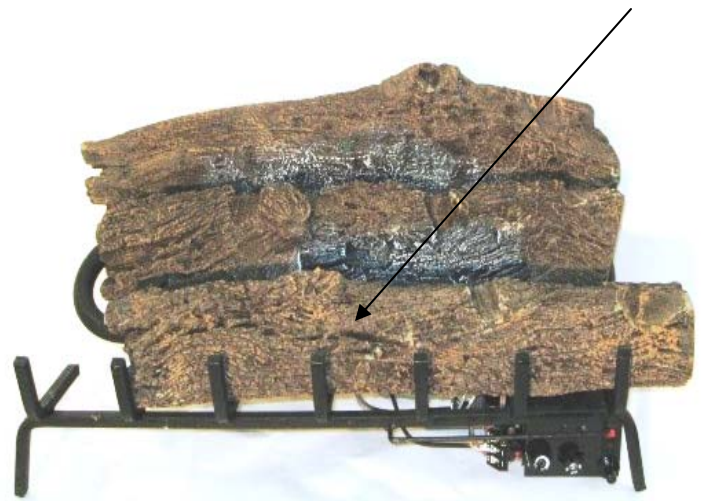

**WARNING:** It is imperative that the flame does not come into contact with the logs. Some adjustment with the logs in the notches may be required in order to ensure that there is no impingement. It is the installers' responsibility to ensure proper log placement and adjustment.


**WARNING:** Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance will result in property damage or personal injury.

# Carolina Creek Side 30"

Step 4: Place left log H-1061 . Place right log H-1064.



Step 5: Place log H-1062 & H-1063. Place the accent logs H-1078 & H-1077 as shown below.

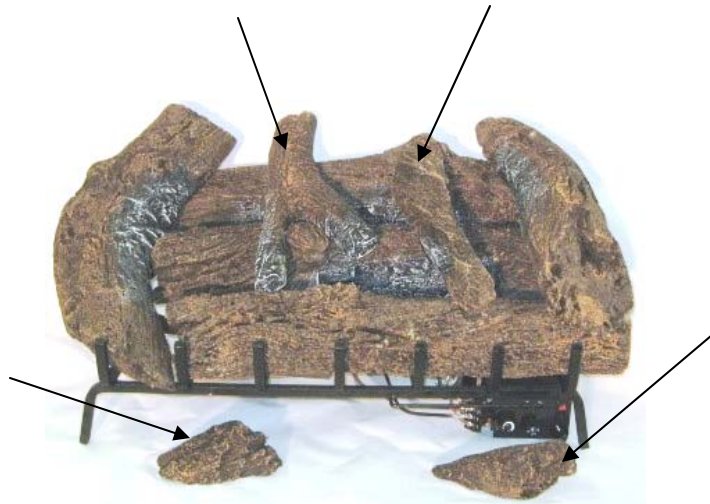

# Carolina Creek Side 30''



H-1060



H-1059



H-1058



H-1061



H-1062



H-1063



H-1064



H-1078



H-1077