

# Oak Ridge Creek 24"

**FOR BEST RESULTS WE RECOMMEND THAT YOU PLACE YOUR GLOWING EMBERS ON THE BURNER BEFORE SETTING UP YOUR LOG SET. SEE THE INSTRUCTION MANUAL THAT WAS SUPPLIED WITH THE BURNER HEARTH KIT.**


Step 1. Place back log H-1054. Then place front log H-1053



Step 2. Place log H-01033 & H-1055




Step 3. Place log H-1031

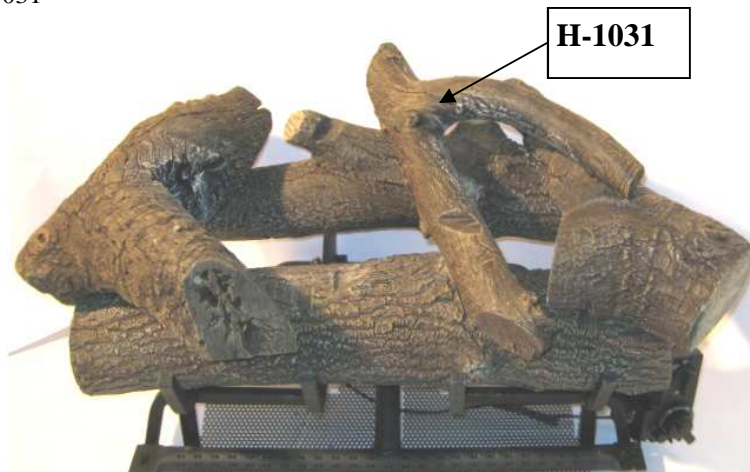


# Oak Ridge Creek 24"

Step 4. Place log H-0852

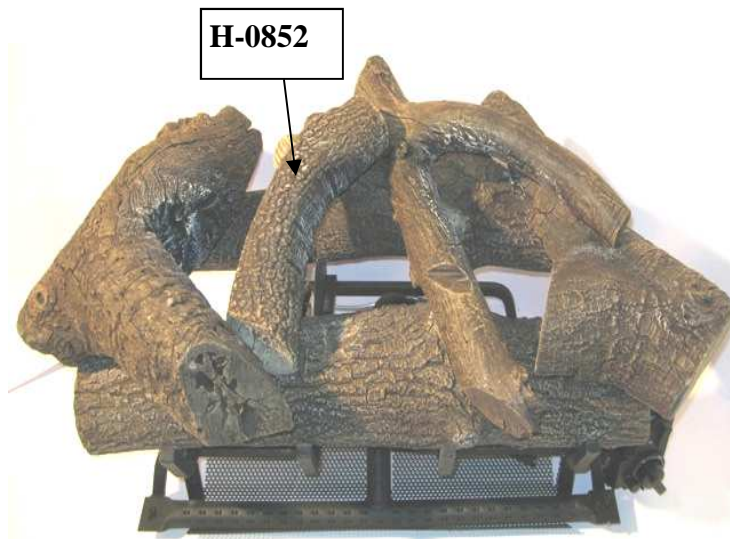

Step 5. Place log H-1035. Place lower front logs H-1056 & H-1057 as shown below. Place pine cone ( A-380) in front of the controls.

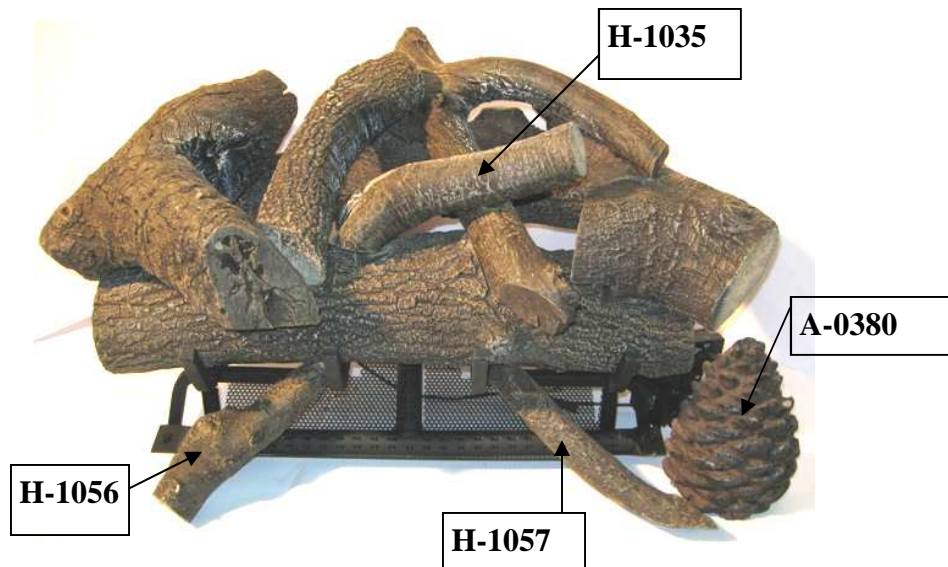

# Oak Ridge Creek 24"



**H-1054**



**H-1053**



**H-1033**



**H-1031**



**H-1055**



**H-1035**



**H-0852**

**A-0380**



**H-1056**




**H-1057**



# Oak Ridge Creek 30"

**FOR BEST RESULTS WE RECOMMEND THAT YOU PLACE YOUR GLOWING EMBERS ON THE BURNER BEFORE SETTING UP YOUR LOG SET. SEE THE INSTRUCTION MANUAL THAT WAS SUPPLIED WITH THE BURNER HEARTH KIT.**

Step 1. Place back log H-1034. Then place front log H-1027

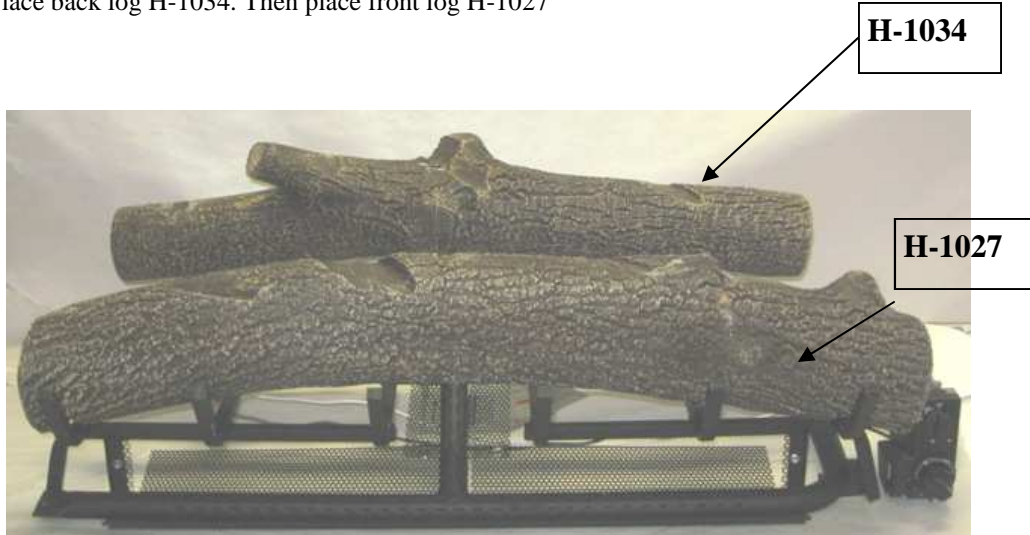


Step 2. Place log H-01033 & H-1030




# Oak Ridge Creek 30"

Step 3. Place log H-1032 & H-1031

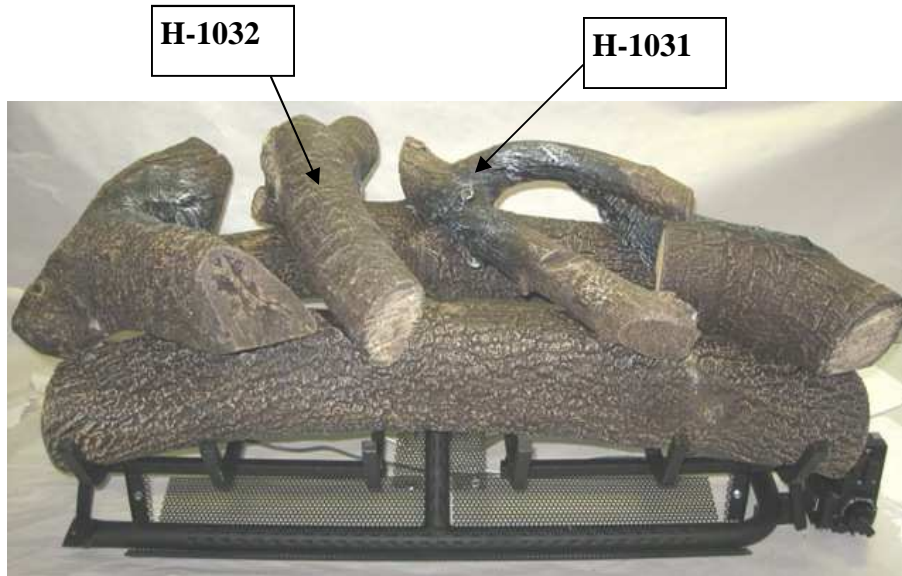

Step 4. Place log H-1035. Place logs H-1028 & H-1029 as shown below. Place pine cone (A-0380) in front of the controls.

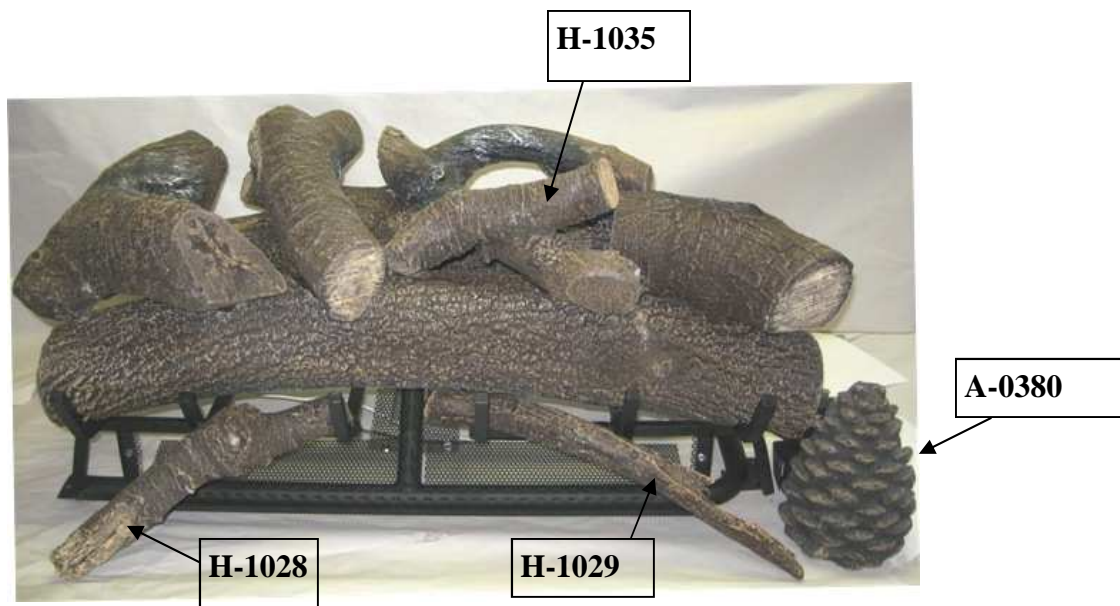

# Oak Ridge Creek 30"



**H-1034**



**H-1027**



**H-1033**



**H-1031**



**H-1035**



**H-1032**



**H-1030**



**H-1028**



**H-1029**



**A-0380**