

TCO 18 OD

TEXAS CHARRED OAK (OUTDOOR)

Step 1: Place brick riser A-0305 on the back of the grate.



Step 2: (4-UB1 Log will be in the burner box.) Place the back log 4-UB1 on top of the brick riser.



Step 3: Place the 2 front logs A-600




Step 4: .Place logs A-0606 & A-0605




TCO 18 OD

TEXAS CHARRED OAK (OUTDOOR)

Step 4: .Place log A-0620

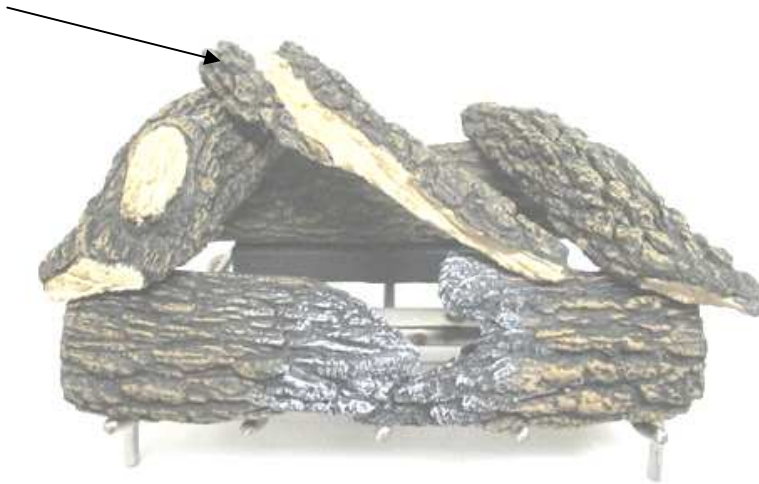

Step 5: .Place logs A-0531 & A-0503

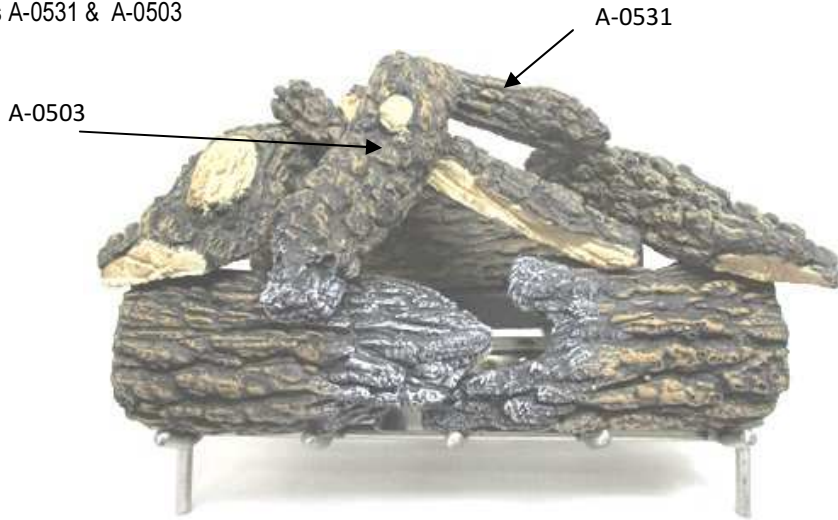

A-0305



A-0606



4-UB1



A-0600 X 2



A-0620



A-0503



A-0531



A-605

